


Single-zone Audio Media Player

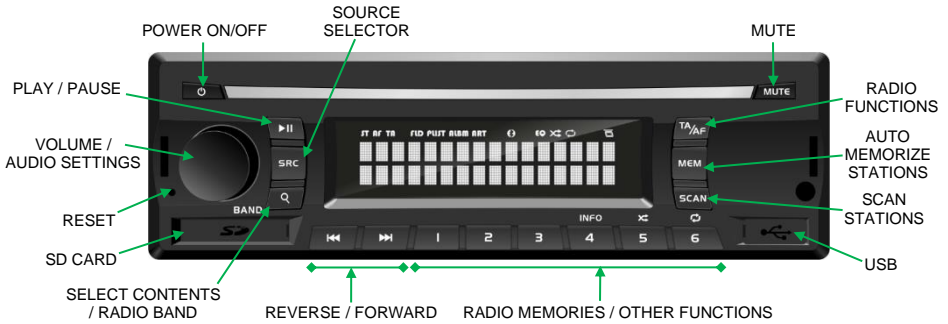

Basic Operation

TO	ACTION	(DAB+ ACT552/DAB+ only)
Turn on/off the equipment	<ol style="list-style-type: none"> Put the vehicle ignition to ACC. Press [⏻] to turn on the equipment. Press and hold [⏻] to turn off the equipment. 	
Select a source	Press [SRC] repeatedly until select the desired source: <ul style="list-style-type: none"> Radio (AM/FM/DAB) – radio tuner. Media (USB) – USB media player. Media (SD) – SD card media player. Audio AUX (Auxiliary Input). 	
General settings	<ol style="list-style-type: none"> Press and hold [▶] to access the general settings menu. Press repeatedly [VOLUME] to select the desired parameter. Turn the [VOLUME] knob to adjust the value of a parameter. 	
Select a frequency band	Press [Q] / [BAND] repeatedly to select a frequency band: FM , AM or DAB+ .	
Tune a radio station	Press [⏪] to tune automatically to the next or previous station to the current in the FM/AM or DAB+ bands. Press and hold [⏪] to tune AM/FM stations manually or the next / previous DAB+ ensemble.	
Scan radio stations	<ol style="list-style-type: none"> Press and hold [SCAN] to start the continuous scan: <ul style="list-style-type: none"> AM/FM band: the scan stops for a few seconds when the equipment finds a valid station, and next continues the scan. DAB+ band: searches for all the available stations. When finishing, the first valid station found is automatically selected. Press [SCAN] to stop the scan. 	
Memorize radio stations manually	Memorize a tuned radio station: press and hold any memory button [1] to [6]. Select a memorized radio station: press the button [1] to [6] corresponding to the memory where the radio station is memorized.	
Memorize radio stations automatically	Only in the AM/FM bands <ol style="list-style-type: none"> Press and hold [MEM] to start the stations scan and memorization process. Press [MEM] to stop the process at any time. The best stations are automatically stored in the six memory positions.	
Select USB / SD contents	With the USB or SD Card source selected: <ol style="list-style-type: none"> Press [Q] to enter the content selection menu. Press [Q] repeatedly to navigate through the various levels of the contents of the device: <i>List of files</i> → <i>List of folders</i>. Use [⏪] keys and/or the [VOLUME] driver knob to select the level and file to be played. Press [▶] / [VOLUME] knob to play the selected item. 	

TO	ACTION
Activate microphone	<p style="text-align: right;">(DAB+ ACT552/DAB+ only)</p> From any source: <ol style="list-style-type: none"> 1. Turn on the microphone to activate the MIC source. 2. Turn the [VOLUME] knob to adjust the microphone level. 3. Turn off the microphone to return to the previous source.

Reset and Restore the Factory Settings

TO	ACTION
Reset the equipment	Press the button [RESET] located on the left of the front panel.
Restore the factory settings	<ol style="list-style-type: none"> 1. Press [RESET] + [MUTE] simultaneously for 5 seconds. 2. Release the button [RESET] while holding the key [MUTE] until 3 beeps are heard.

Equipment Firmware Version

TO	ACTION
Display the equipment firmware version	<ol style="list-style-type: none"> 1. Switch off the equipment. 2. Press and hold the key [1] while turning on the equipment pressing [⏻].

User Manual



Download the user manual at the following web page:
<https://docs.actiasystems.com>